




WOODCHUCKS CABINET MOULDING

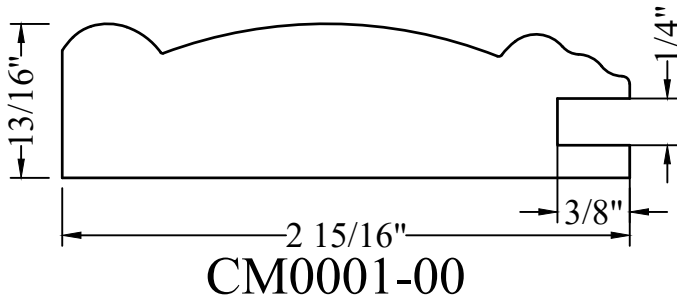




CM0001-00

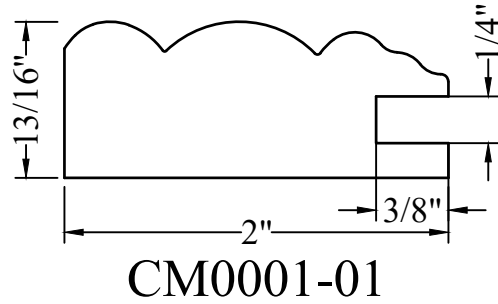




CM0001-01

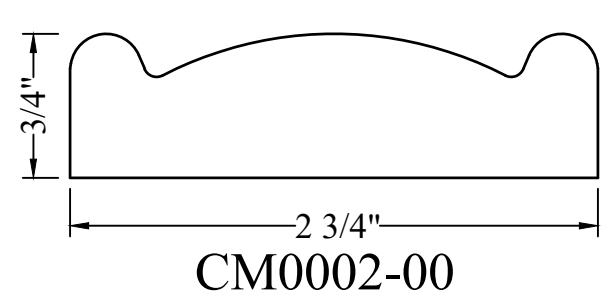










CM0002-00

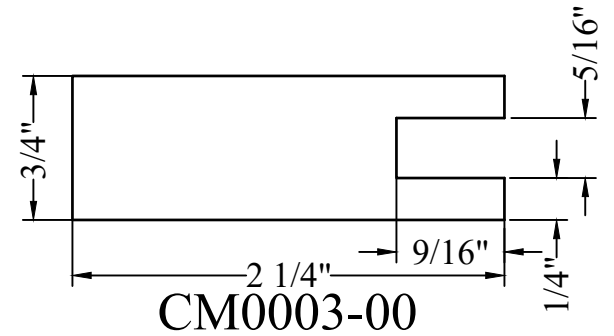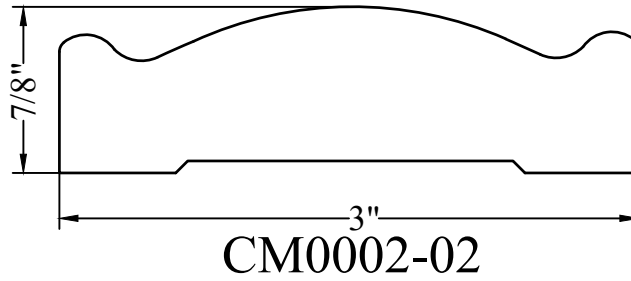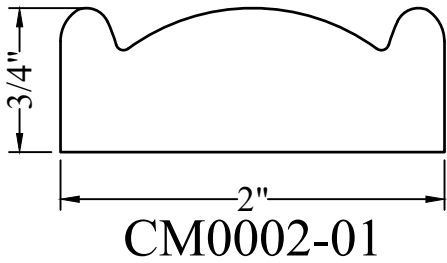









CM0003-00

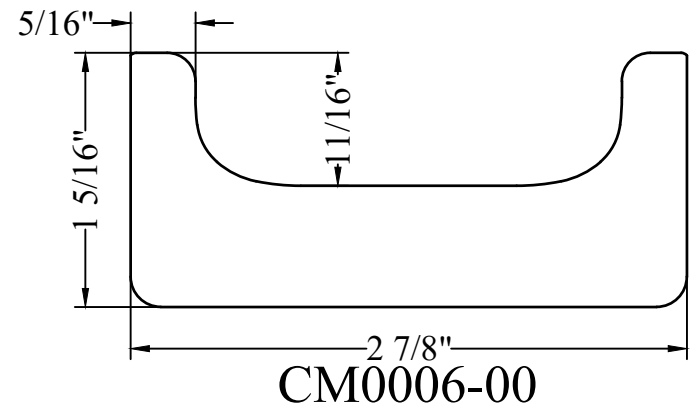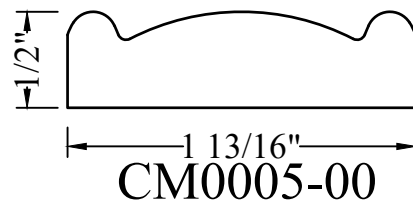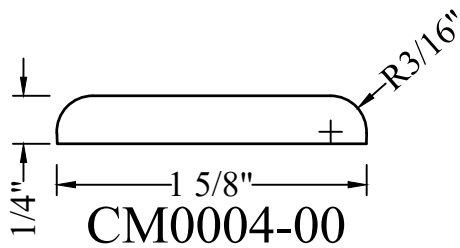










WOODCHUCKS CABINET MOULDING

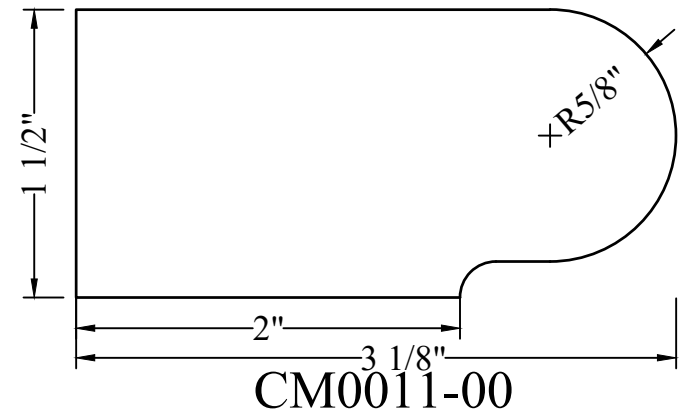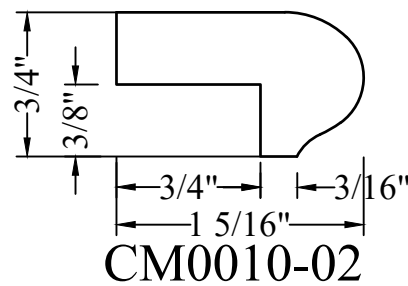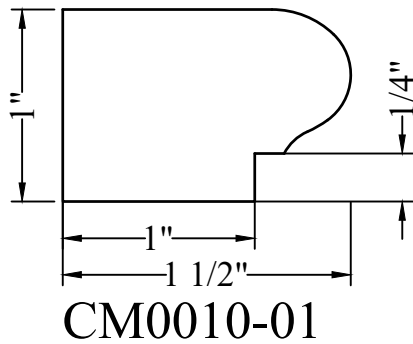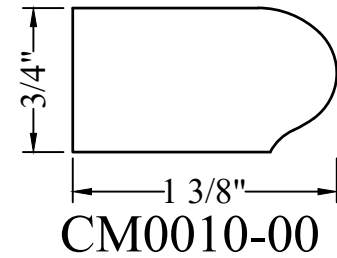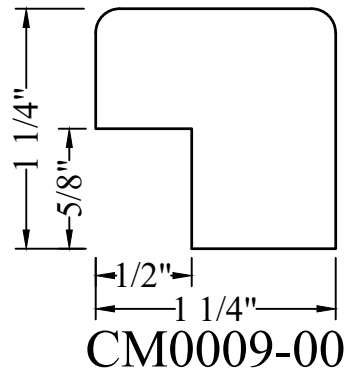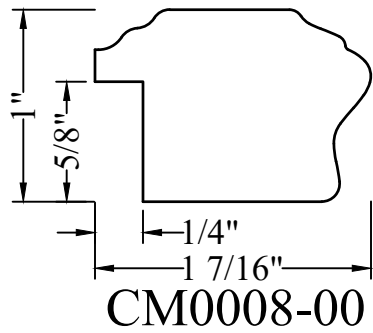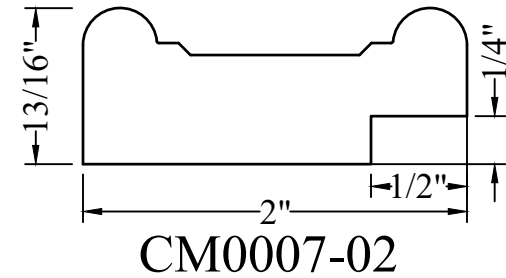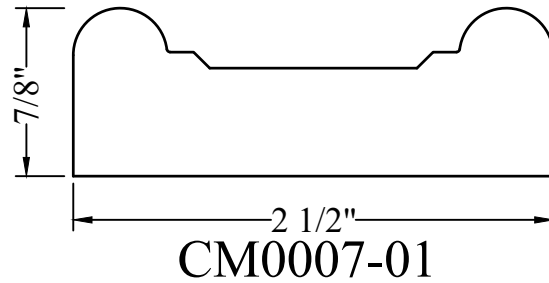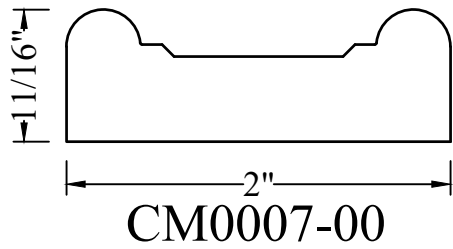








WOODCHUCKS CABINET MOULDING

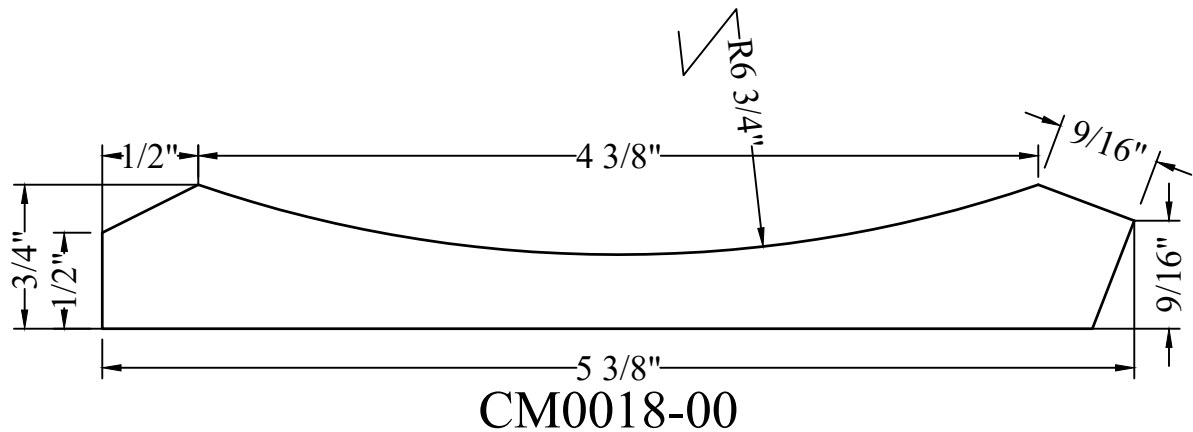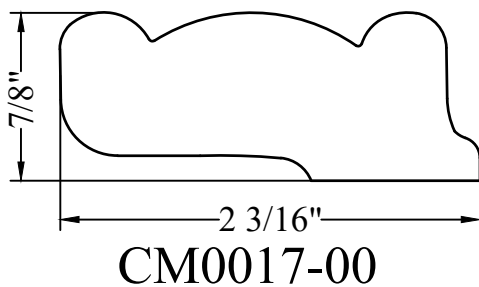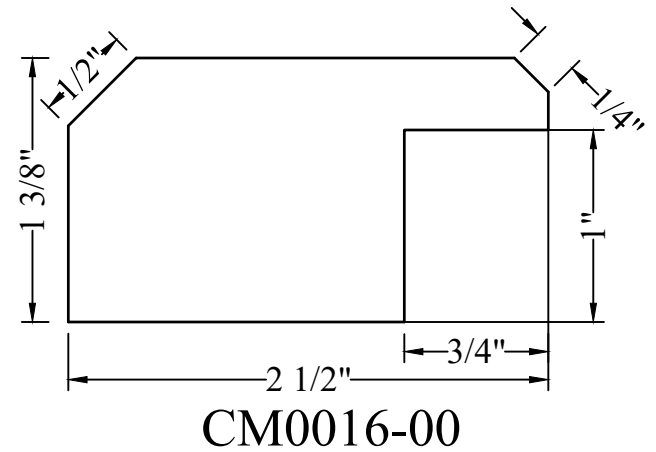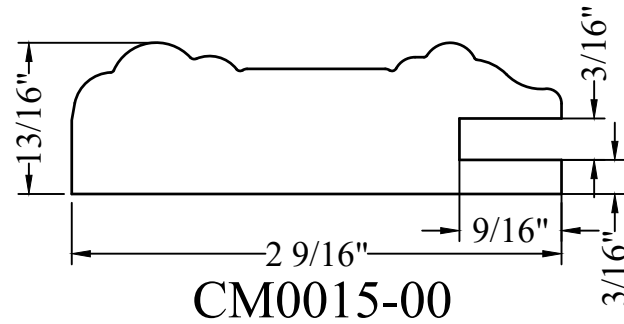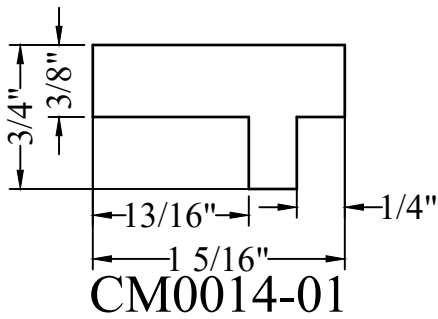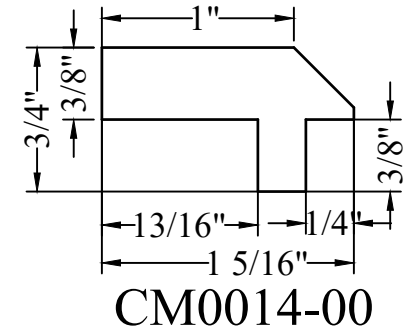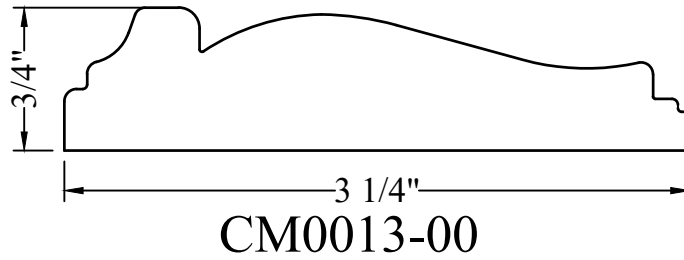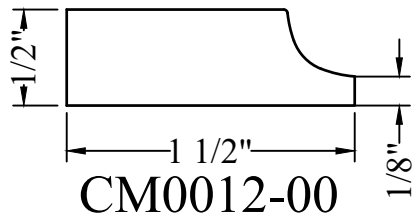

WOODCHUCKS CABINET MOULDING

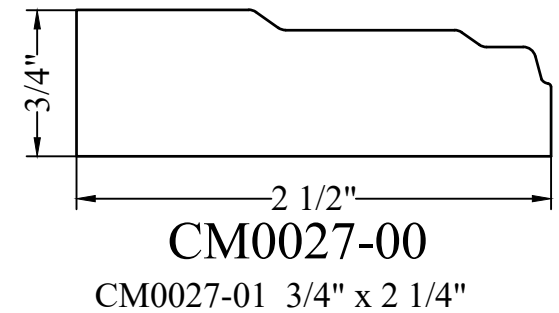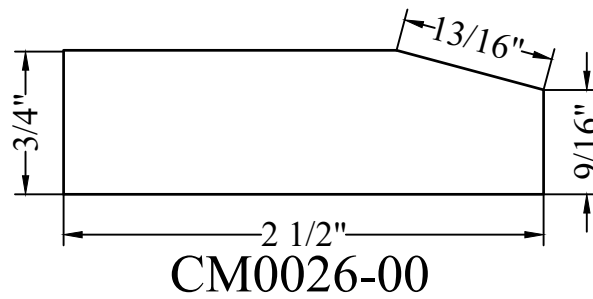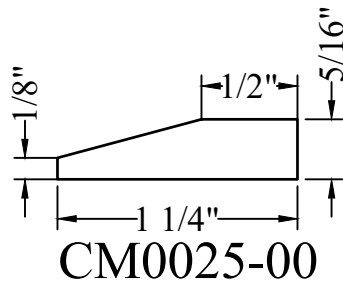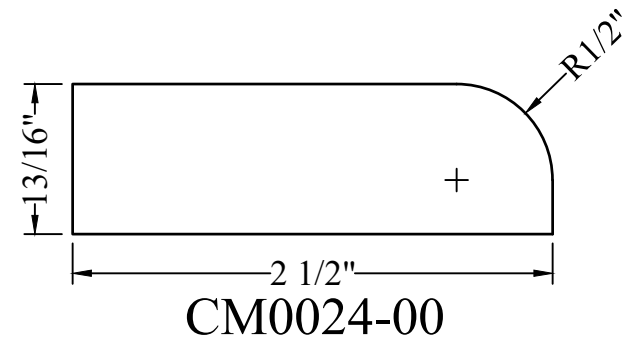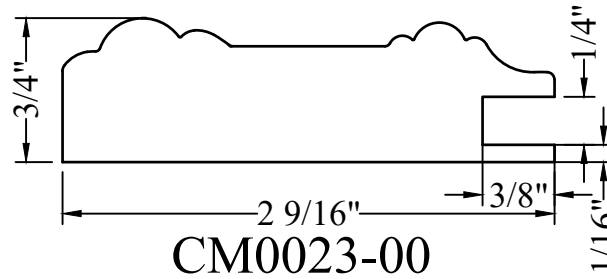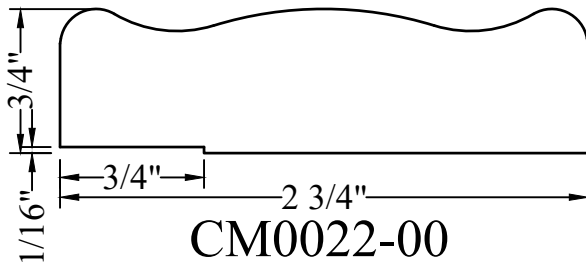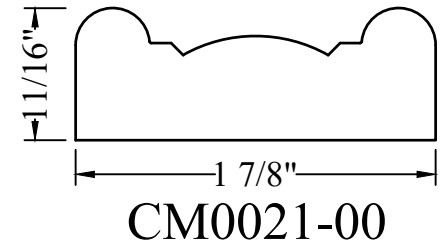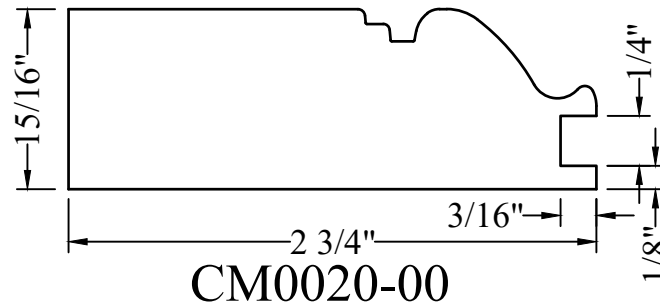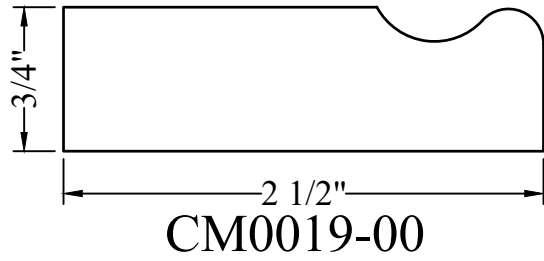

WOODCHUCKS CABINET MOULDING

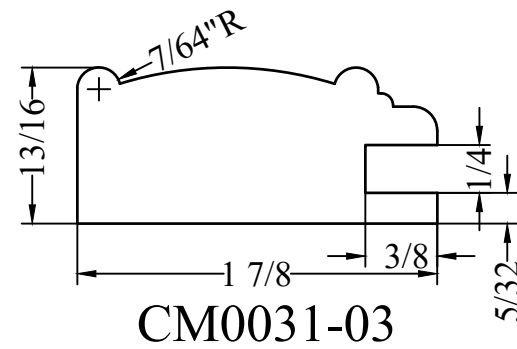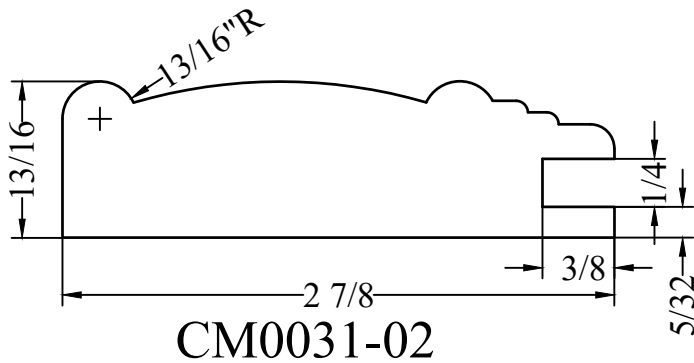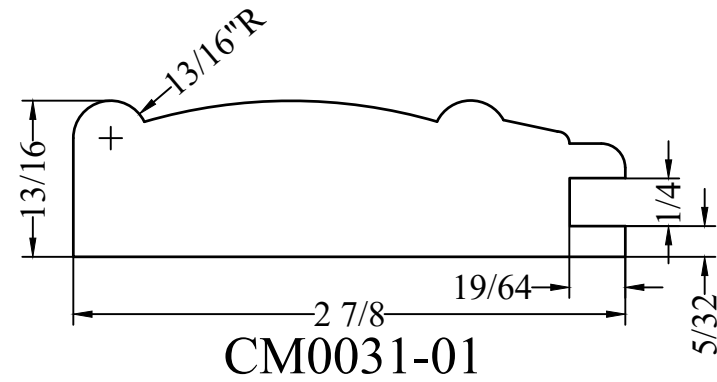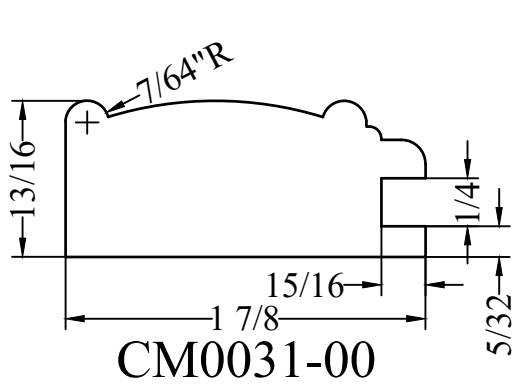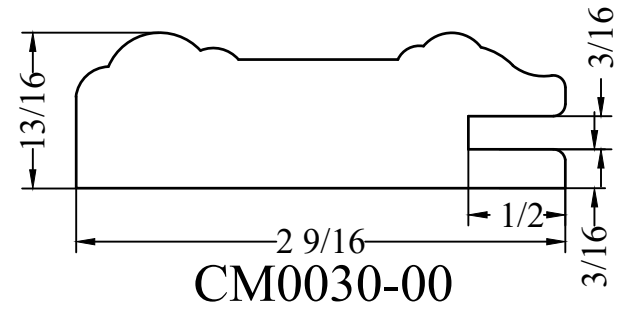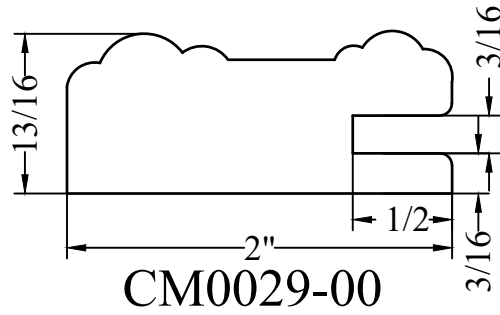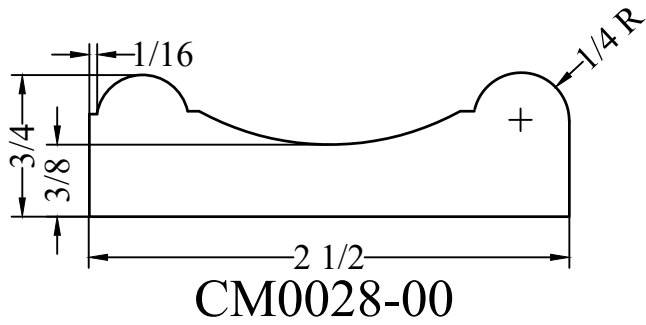

WOODCHUCKS CABINET MOULDING

