

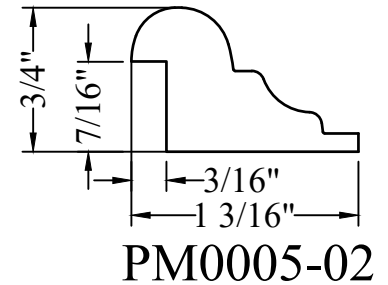
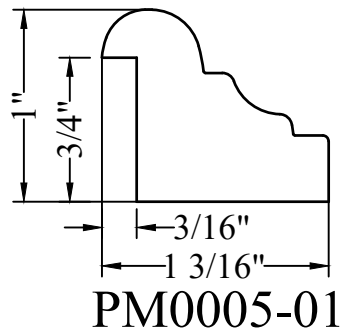
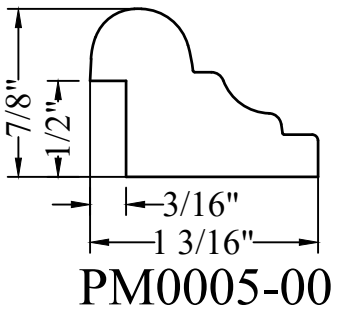
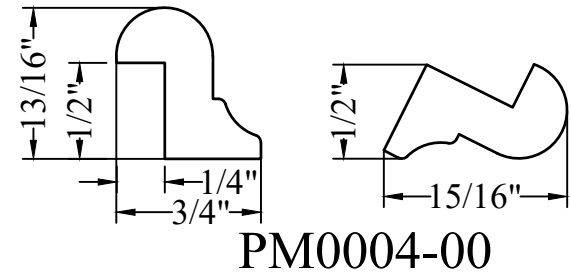
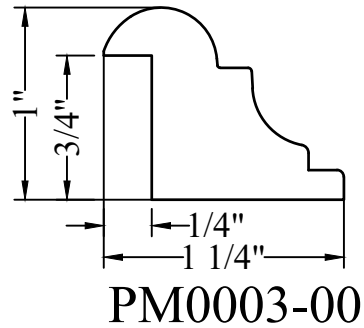
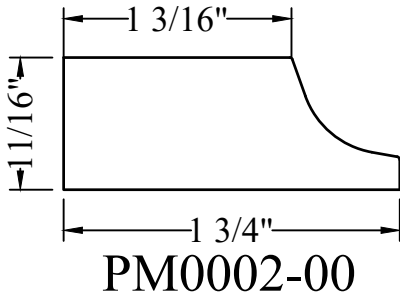
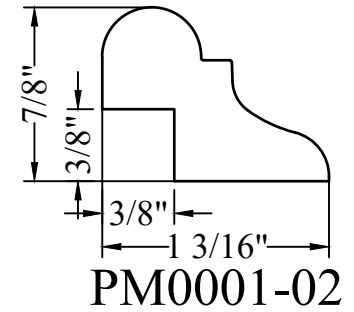
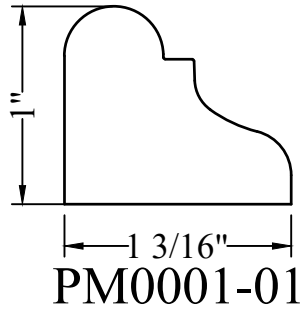
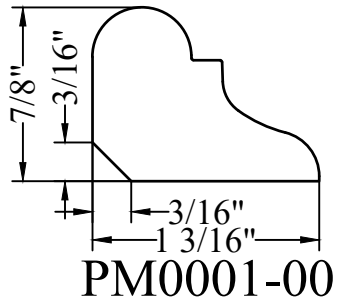
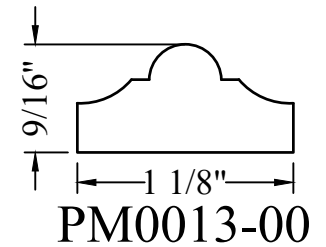
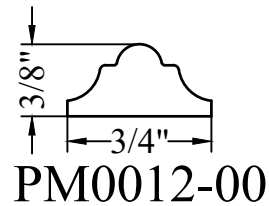
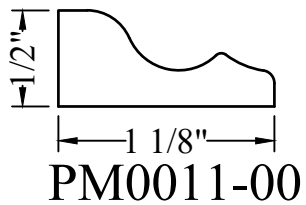
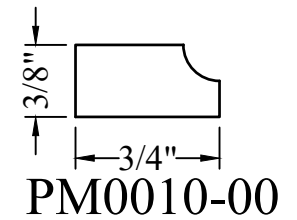
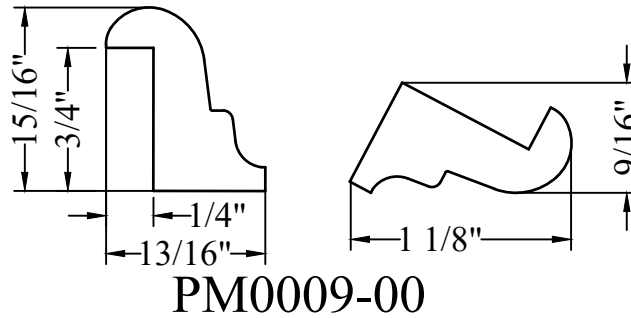
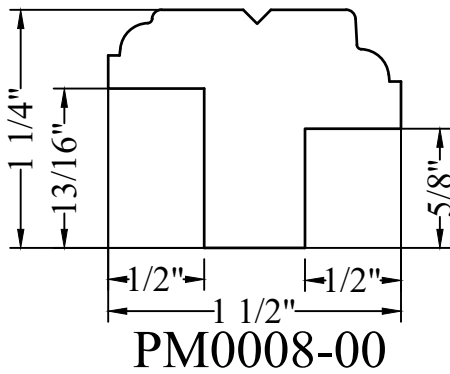
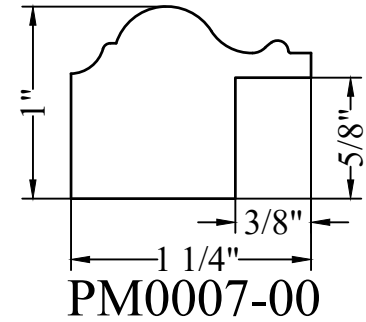











WOODCHUCKS PANEL MOULD

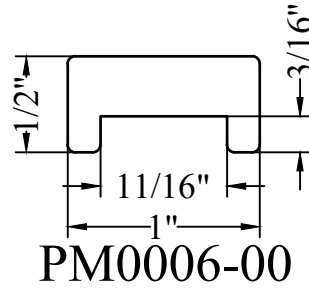

WOODCHUCKS PANEL MOULD










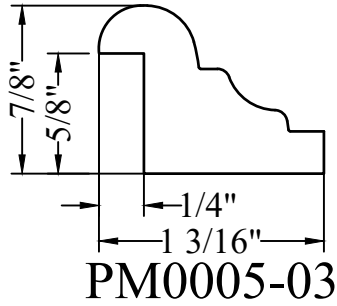


WOODCHUCKS PANEL MOULD



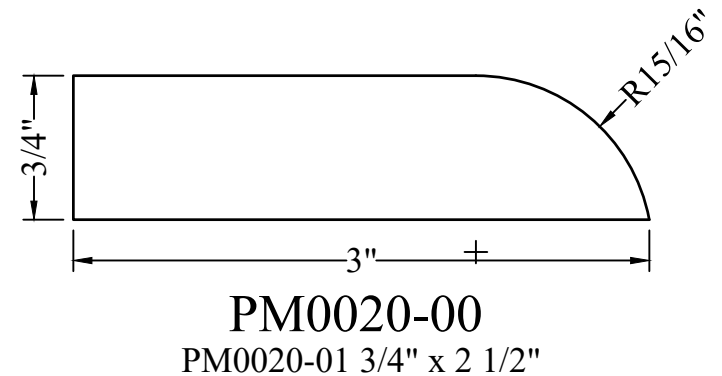
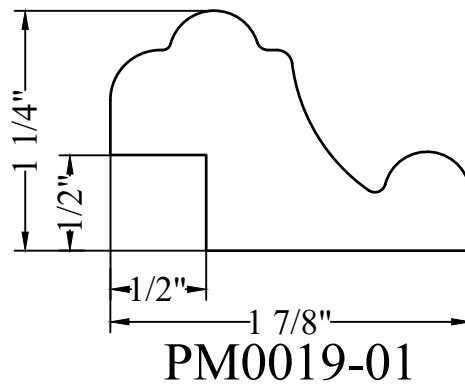
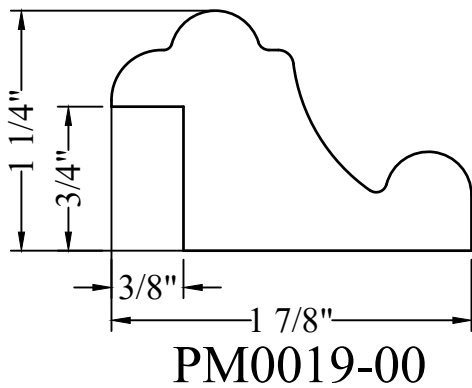
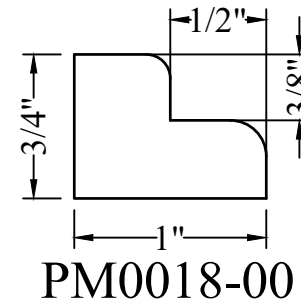
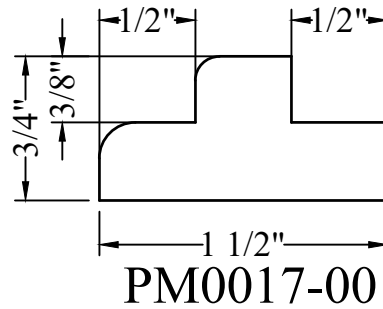
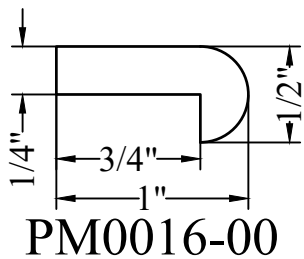
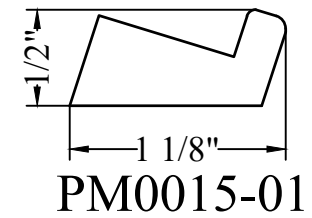
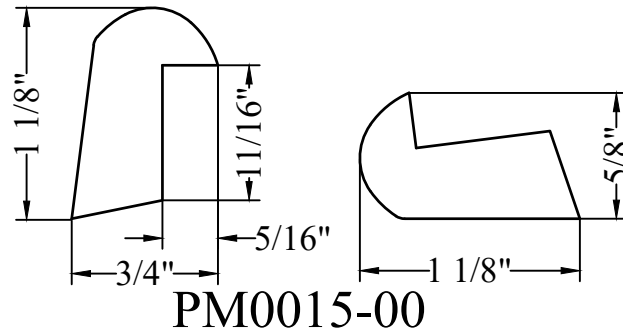
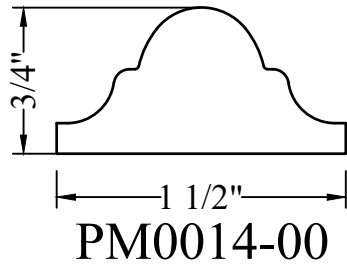


PM0020-01 3/4" x 2 1/2"


WOODCHUCKS PANEL MOULD

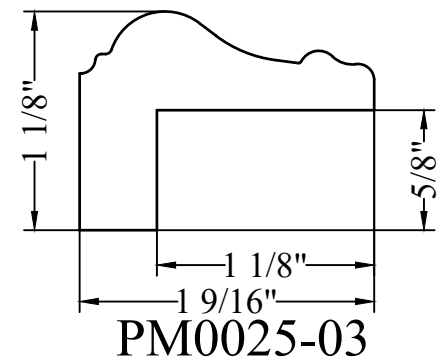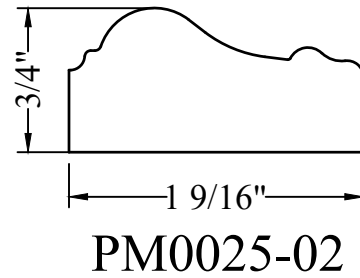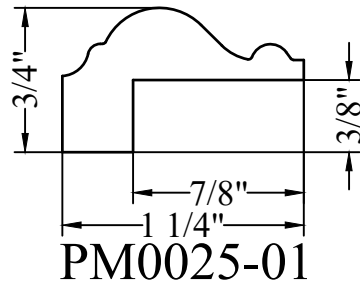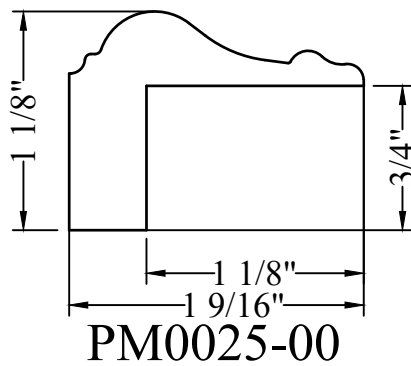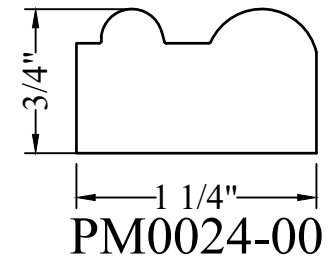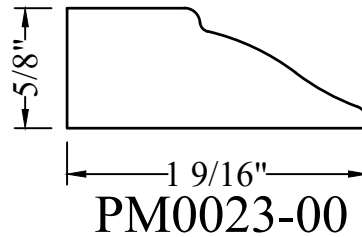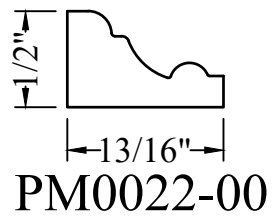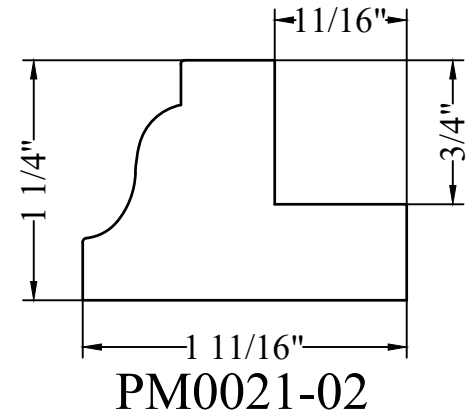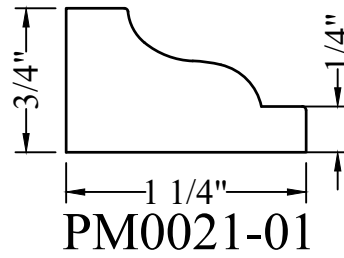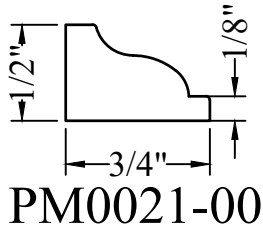


WOODCHUCKS PANEL MOULD

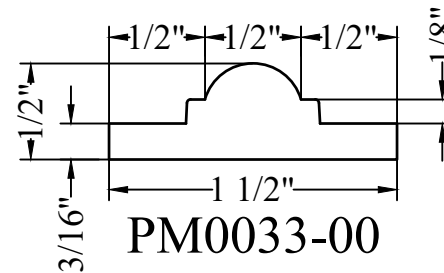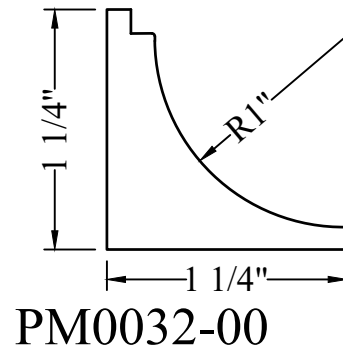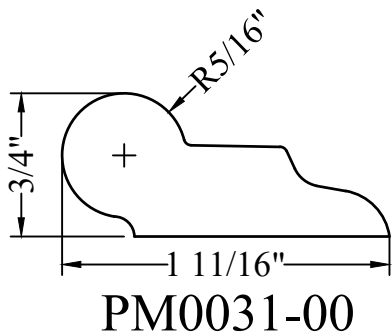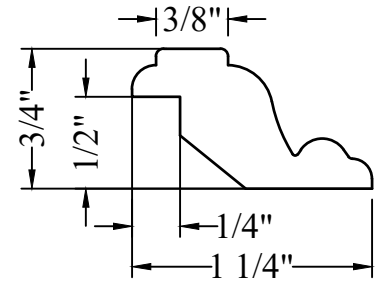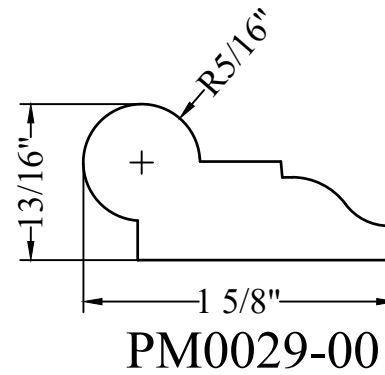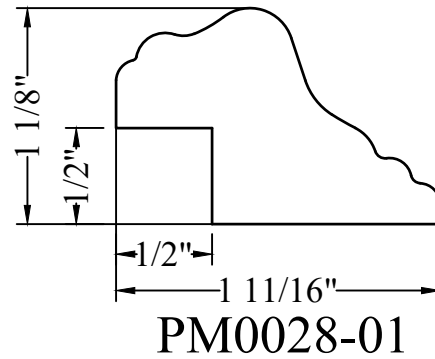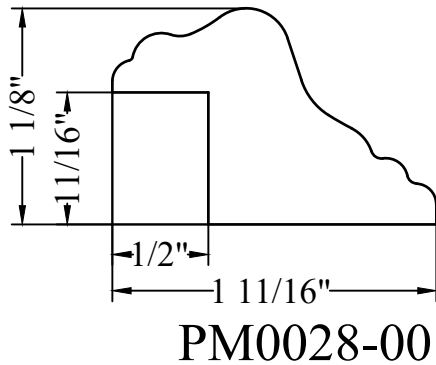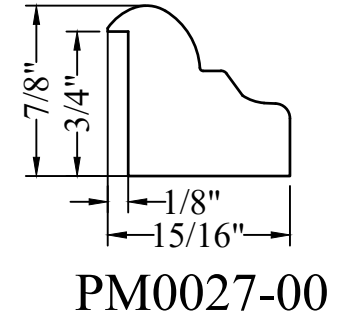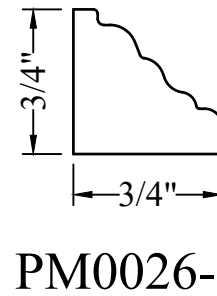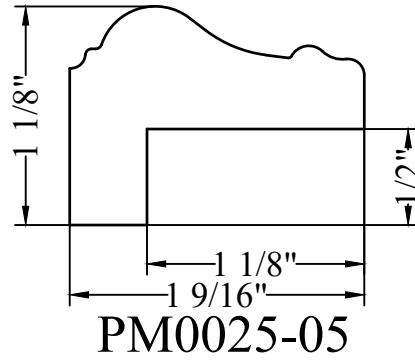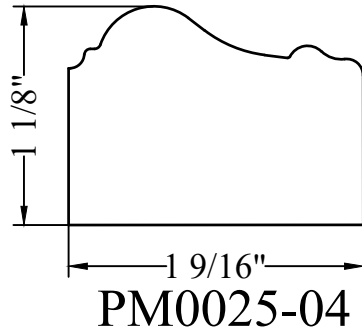


WOODCHUCKS PANEL MOULD

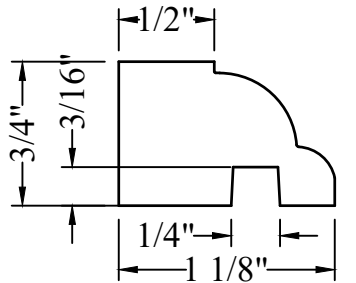


PM0034-00

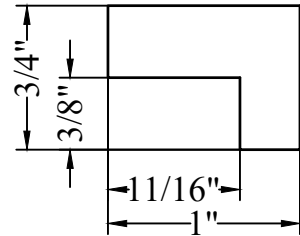


PM0035-00

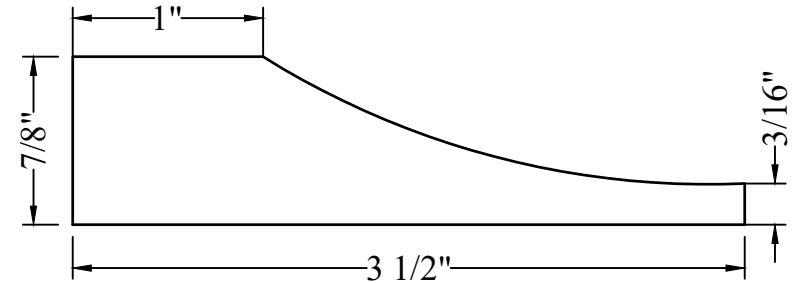


PM0036-00

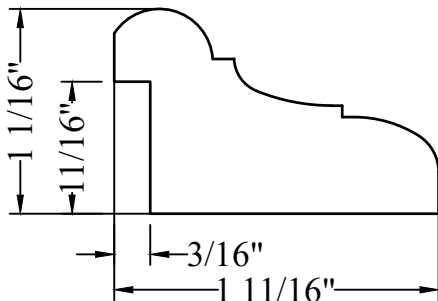


PM0037-00

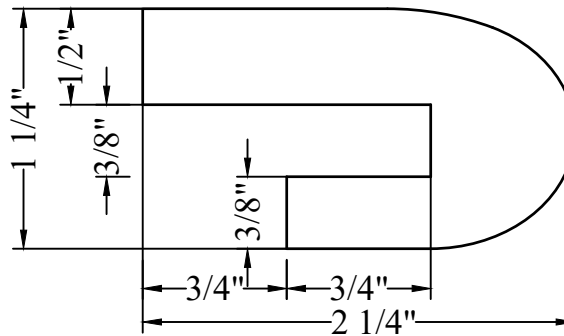


PM0038-00

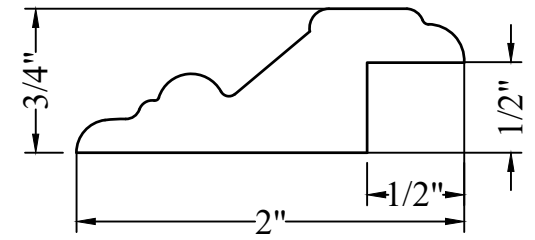


PM0039-00

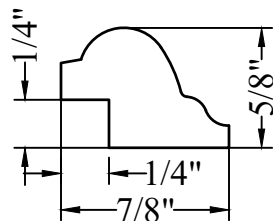

PM0040-00

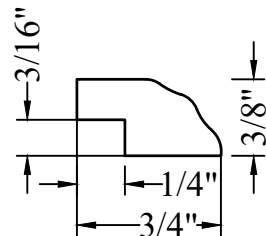


PM0041-00

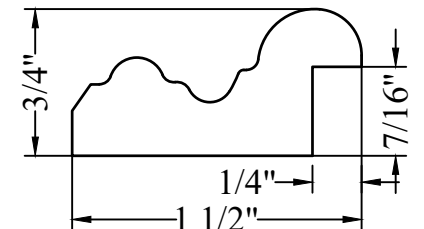


PM0042-00


WOODCHUCKS PANEL MOULD

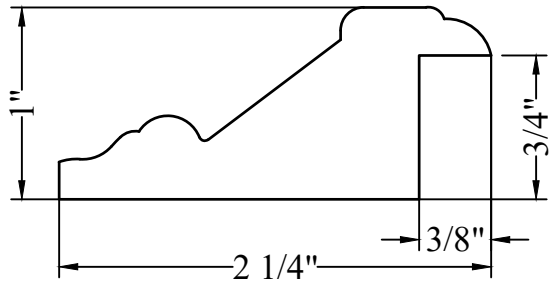


PM0043-00

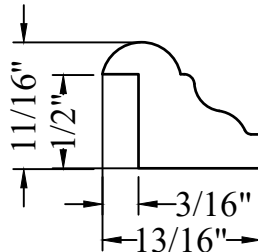


PM0044-00

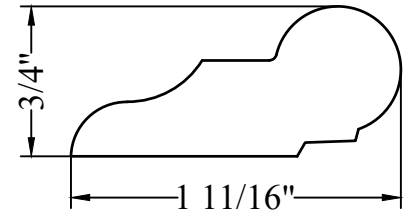


PM0045-00

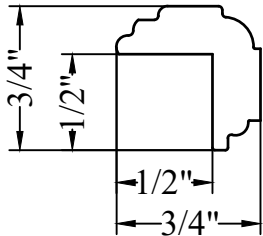


PM0046-00

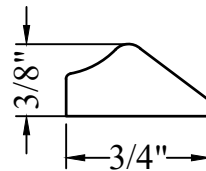


PM0047-00

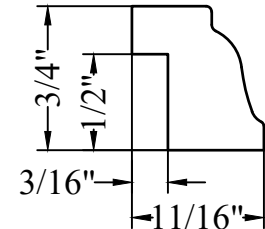


PM0048-00

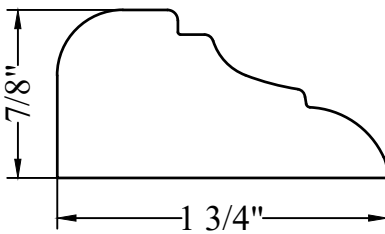

PM0049-00





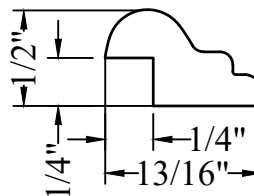


PM0050-00








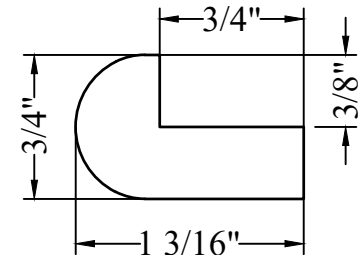


PM0051-00








WOODCHUCKS PANEL MOULD

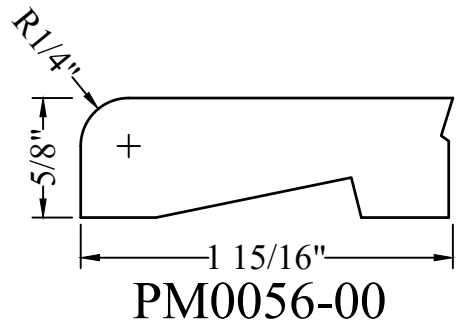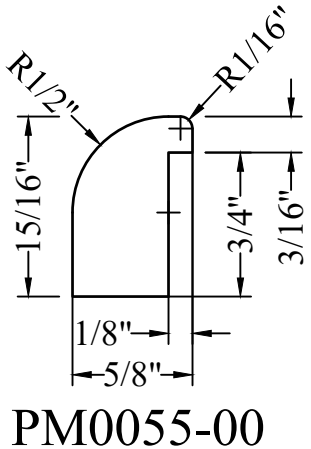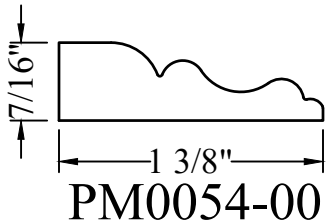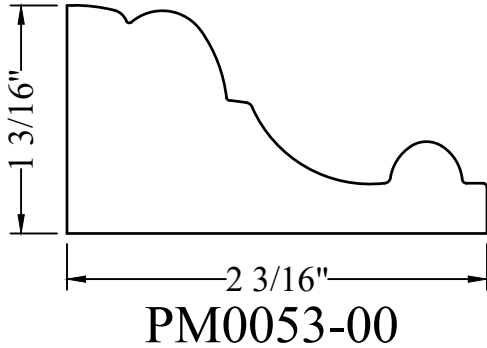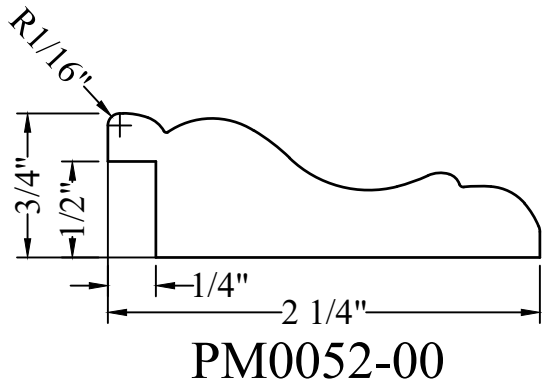





WOODCHUCKS PANEL MOULD

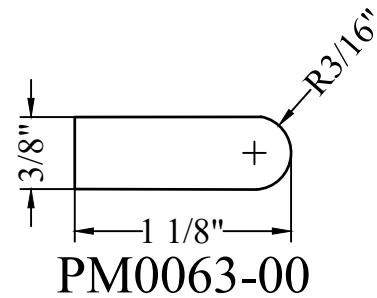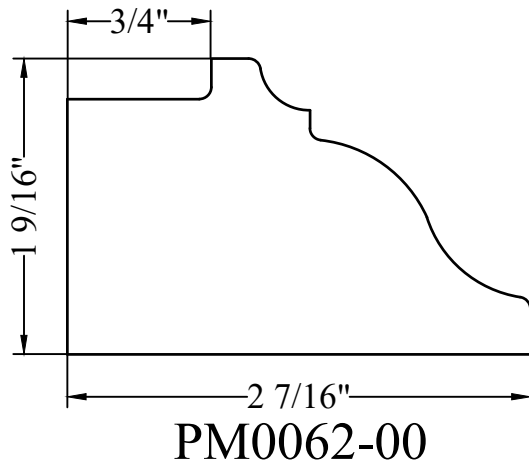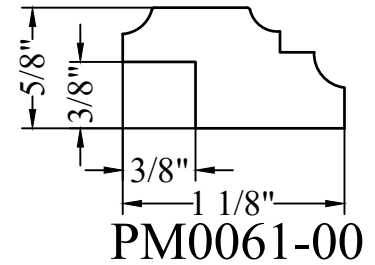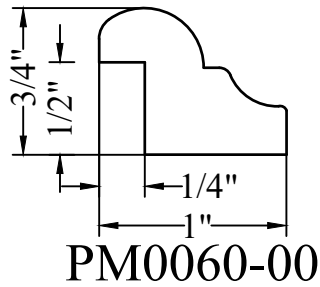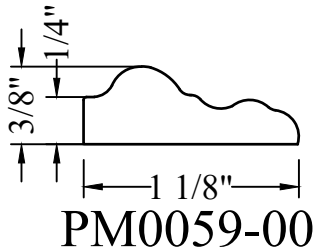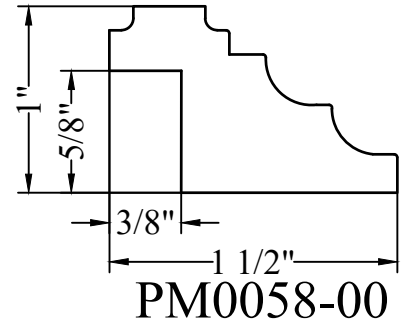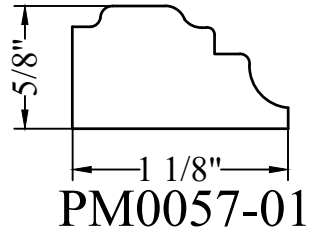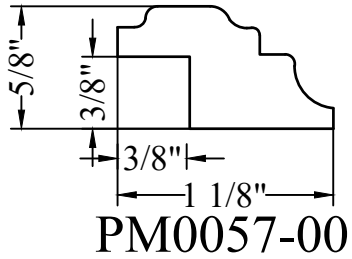








WOODCHUCKS PANEL MOULD

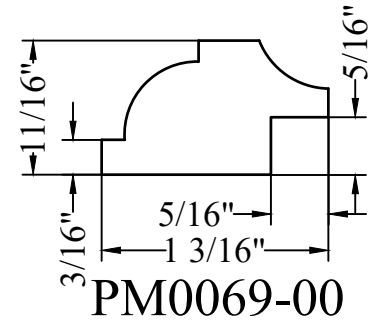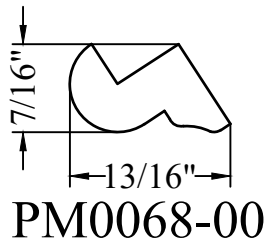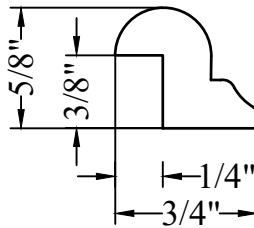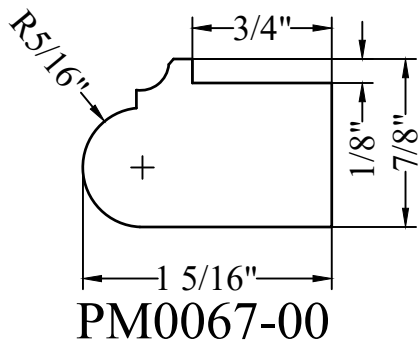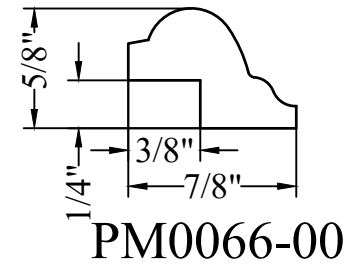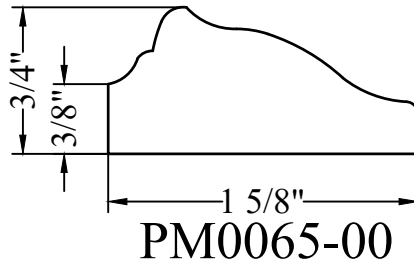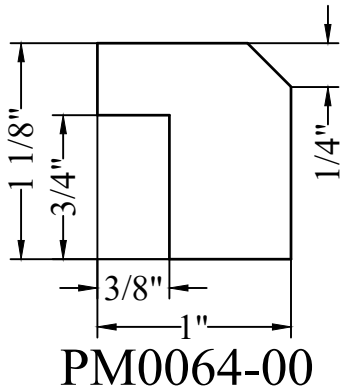







WOODCHUCKS PANEL MOULD

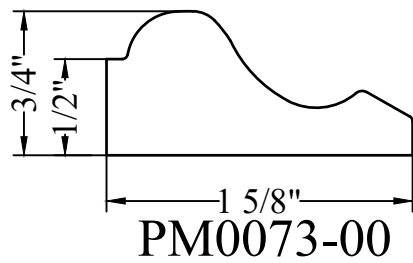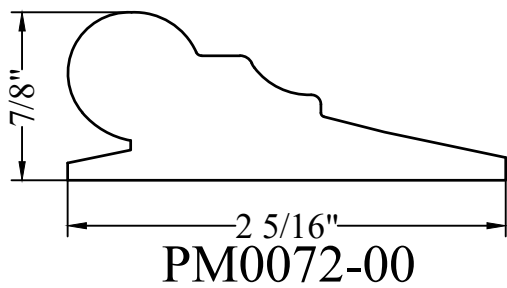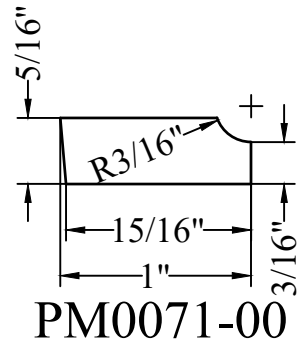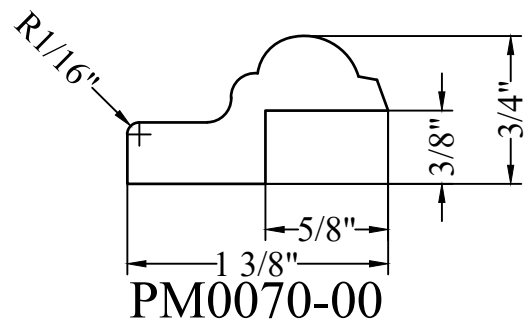










WOODCHUCKS PANEL MOULD

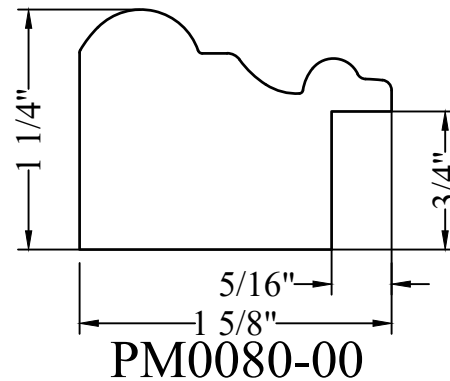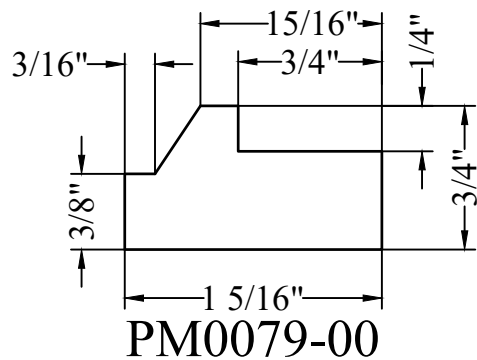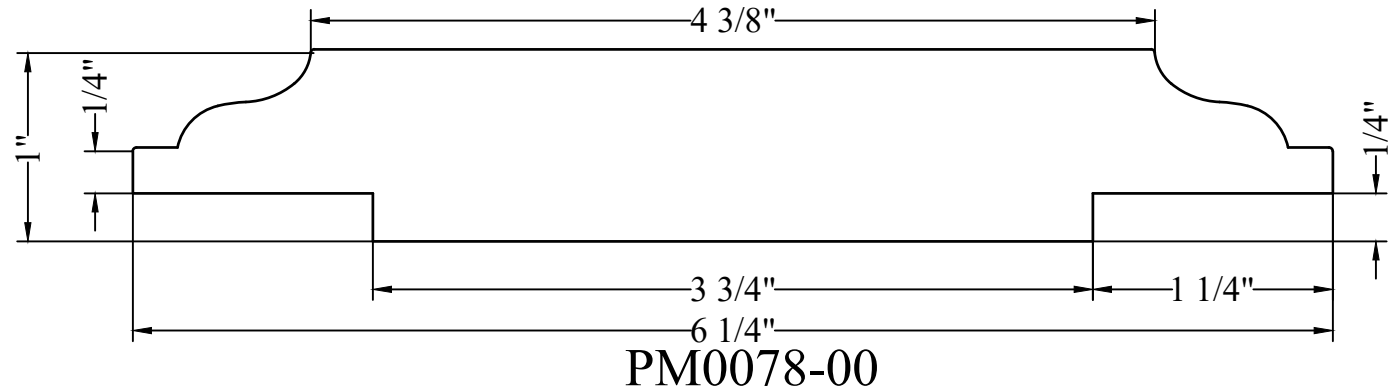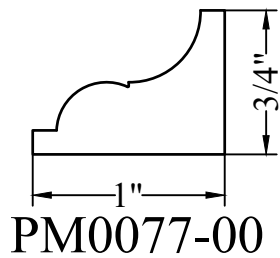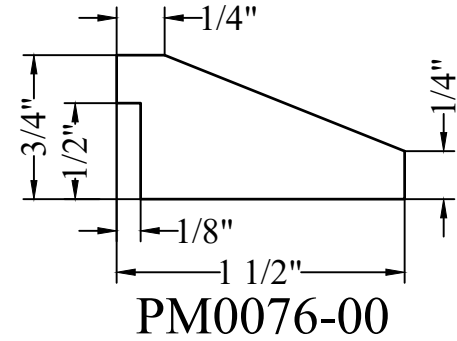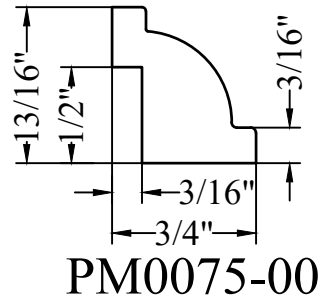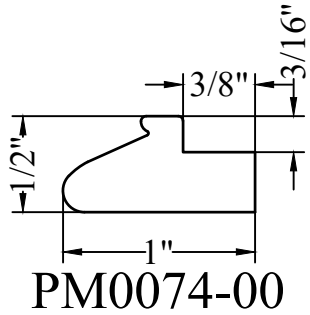


WOODCHUCKS PANEL MOULD

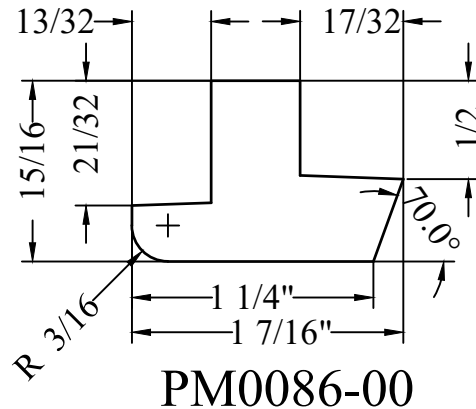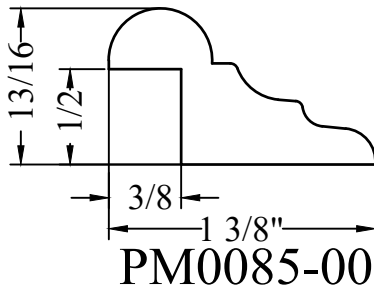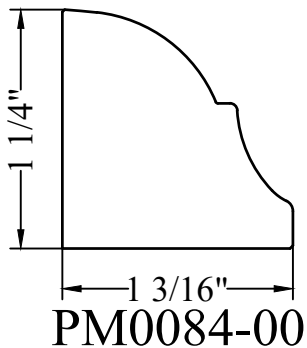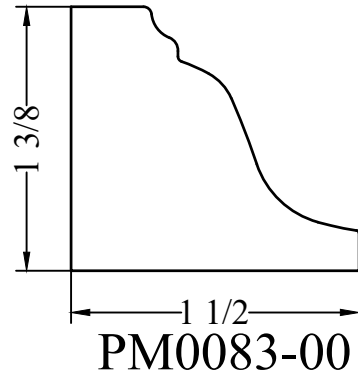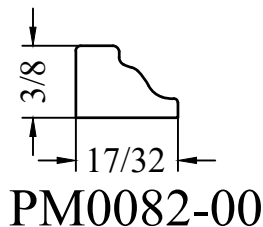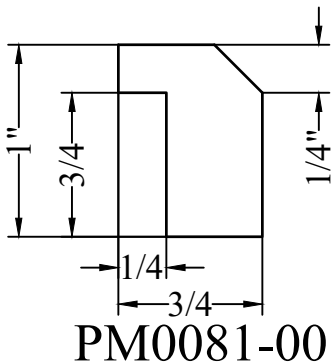


WOODCHUCKS PANEL MOULD

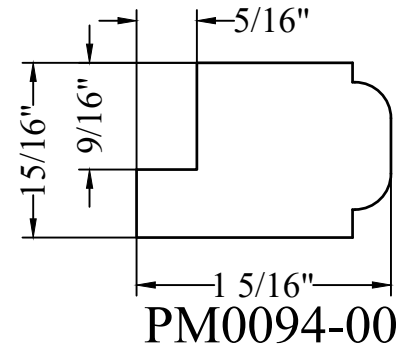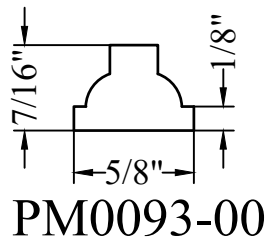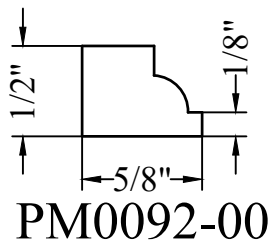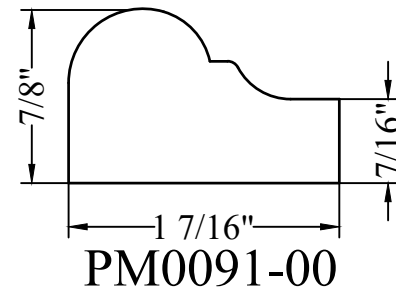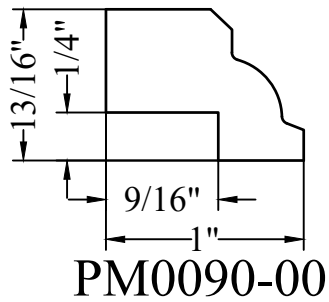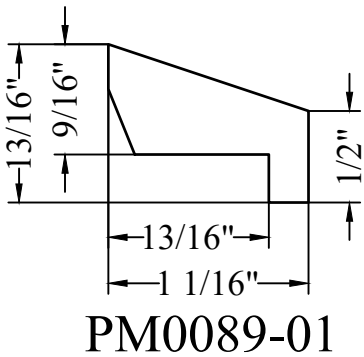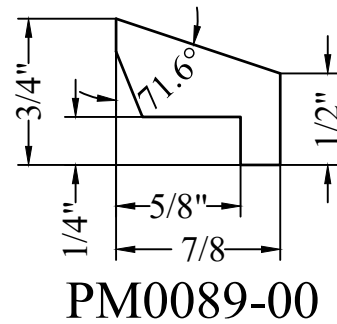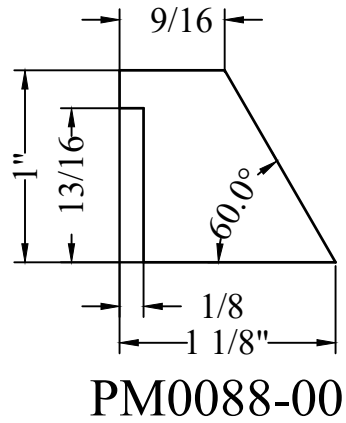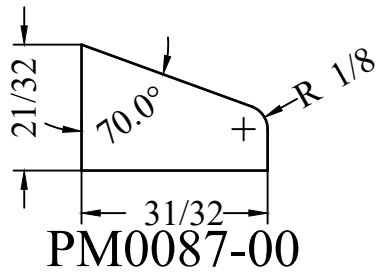


WOODCHUCKS PANEL MOULD

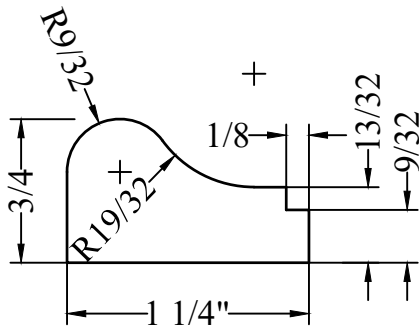

PM0095-00

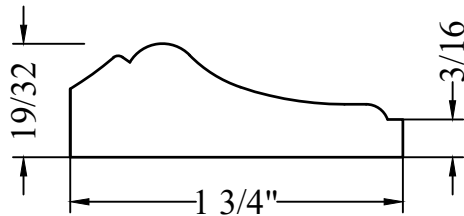

PM0096-00A

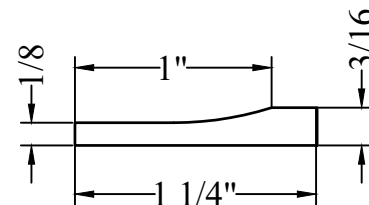

PM0096-00B